

# CHIAYO

# EZ-TALK

Portable Smart Voice Amplifier

Operation manual



ISO 9001



ISO 14001



OHSAS 18001



GREEN PRODUCT



Please read and follow the instructions in this manual thoroughly to obtain optimum results from this unit. We also recommend that you keep this manual handy for future reference.

## SAFETY PRECAUTIONS

Make sure to observe the following handling precautions so that a fire or personal injury does not result from leakage or explosion of the battery.

- Do not short, disassemble, heat or put the battery into a fire.
- Do not solder a battery directly.
- Be sure to use the specified type of battery.
- Note the correct polarity when inserting a battery in the unit.
- Avoid locations exposed to the direct sunlight, high temperature and high humidity when storing batteries.

## IMPORTANT!


Battery discharge naturally according to a certain pattern even not in use. For best performance and a prolonged lifespan, battery should be charged regularly after every use or every month when the system is in storage and not being used!

## IN THE BOX:

Headset microphone, strap, switching power supply (100-240V AC, 15V DC) and operation manual.


\*\*Specifications are subject to change without prior notice.

## PARTS AND FUNCTION

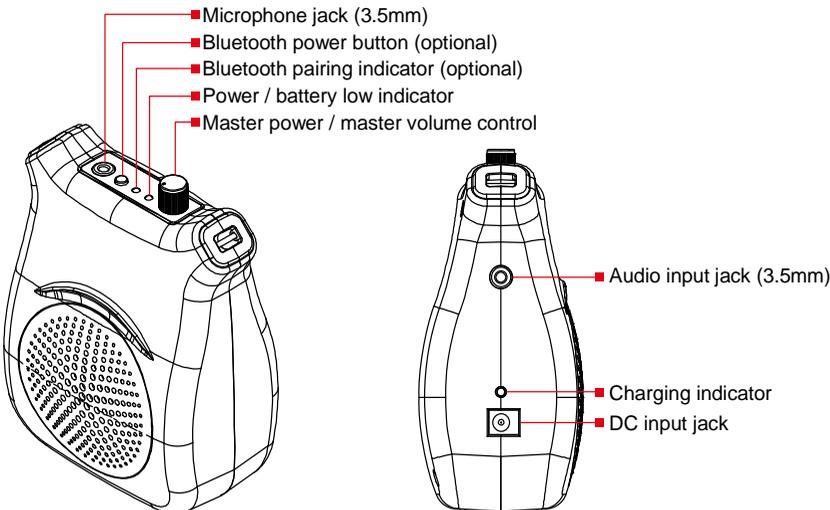

## RECHARGE BEFORE FIRST USE


After unpacking the unit for the first time, please recharge the unit for about 4~6 hours before operation. This is absolutely necessary as the built-in LI-ION battery might have been discharged naturally due to long shipment and storage time, even though it had been fully charged in the factory prior to shipment.



To charge the battery, just plug in the DC end of the switch mode power supply into the DC IN of the unit and charging will start automatically. During the charging process, the charging indicator will flash RED. When this LED turns GREEN, this battery is then fully charged. After removing the power supply, the LED will turn off automatically.


## OPERATING PROCEDURES

To operate this voice amplifier, turn on the main power switch and the power indicator will be GREEN. If it turns RED, its battery power might be too low and recharging is necessary. The amplifier can still operate during charging process.




## CONNECTING THE HEADSET MICROPHONE

There is a MIC IN jack with volume control on this voice amplifier. To use a headset microphone, just insert its phone plug into the MIC IN jack. Then turn on the Power/volume control and rotate it to adjust the volume.



## CONNECTING BLUETOOTH (optional)


1. Turn on the amplifier and then turn on the Bluetooth. The pairing indicator will flash green.



2. Activate Bluetooth on your device (phone, tablet, PC...,etc) and pair with external Bluetooth device named "EZtalk Bluetooth Speaker". After successful linking, the pairing indicator will glow green and you can play your music on EZtalk.



3. Use the master volume control to adjust Bluetooth player's volume.




## CONNECTING EXTERNAL AUDIO

1. Connect your device to the amplifier's AUX IN jack with a 3.5mm cable.



2. Turn on the amplifier and rotate the volume knob to adjust the volume.



# CHIAYO

---

**CHIAYO ELECTRONICS CO.,LTD.**

---

[Http://www.chiayo.com.tw](http://www.chiayo.com.tw) | Email: [sales@chiayo.com.tw](mailto:sales@chiayo.com.tw)

Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan | Tel: 886-2-27415741 | Fax: 886-2-27525242  
Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan | Tel: 886-5-2711000 | Fax: 886-5-5767611